

## VL-140 Pneumatic Drill Parts

*VL-140-Type Pneumatic Drill*

*Quality Replacement Parts*

Part Name	Description
5001 9330	Side Rod Nut
5001 9447	Bushing, Front Head
5009 0554	Roll Pin, Piston Stem Bearing Assembly
5020 2688	Side Rod
5020 2704	Adapter Ring, Back Head
5020 2936	Rubber, Tube Support
5020 2985	Washer, Tube Support
5020 2993	Shank Aligner
5020 5673	Seat, Chuck Jaw Retainer
5020 7877	Chuck Jaw
5020 8644	Locking Lug, Chuck Jaw Retainer
5021 0509	Shaft
5021 0517	Idler Gear, Motor
5021 9963	Retainer, Chuck Jaw
5025 1594	Bushing, Drive Gear
5036 4405	Tube, Outer
5036 4413	Tube Retainer
5036 4421	Rubber, Inner Tube
5036 5220	Use 5096 6084
5036 5253	Drive Gear, Motor
5036 5766	Retaining Ring
5036 8786	Bolt, Chuck Jaw Retaining Locking Lug

5036 5220	Use 5096 6084
5036 5253	Drive Gear, Motor
5036 5766	Retaining Ring
5036 8786	Bolt, Chuck Jaw Retaining Locking Lug
5040 6867	Intermediate Gear, Chuck Driver
5040 6875	Chuck
5040 7741	Sprocket
5049 0069	Use 5064 3642 & 5078 0329
5050 9249	Liner, Air Distributor Body
5051 0536	Piston
5053 2860	Sleeve, Piston Stem Bearing Assembly
5064 3642	Wear Sleeve, Chuck
5064 6967	Tube, Inner
5078 0311	Piston Stem Bearing Assembly
5078 0329	Seat, Chuck
5094 2325	Use 5036 4421
5096 6076	Side Rod
5096 6084	Shaft, Motor Drive Gear